

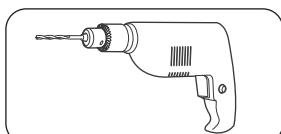
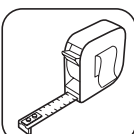
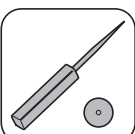
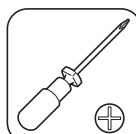
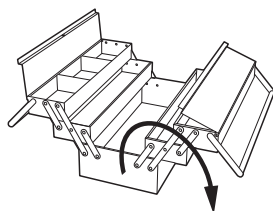
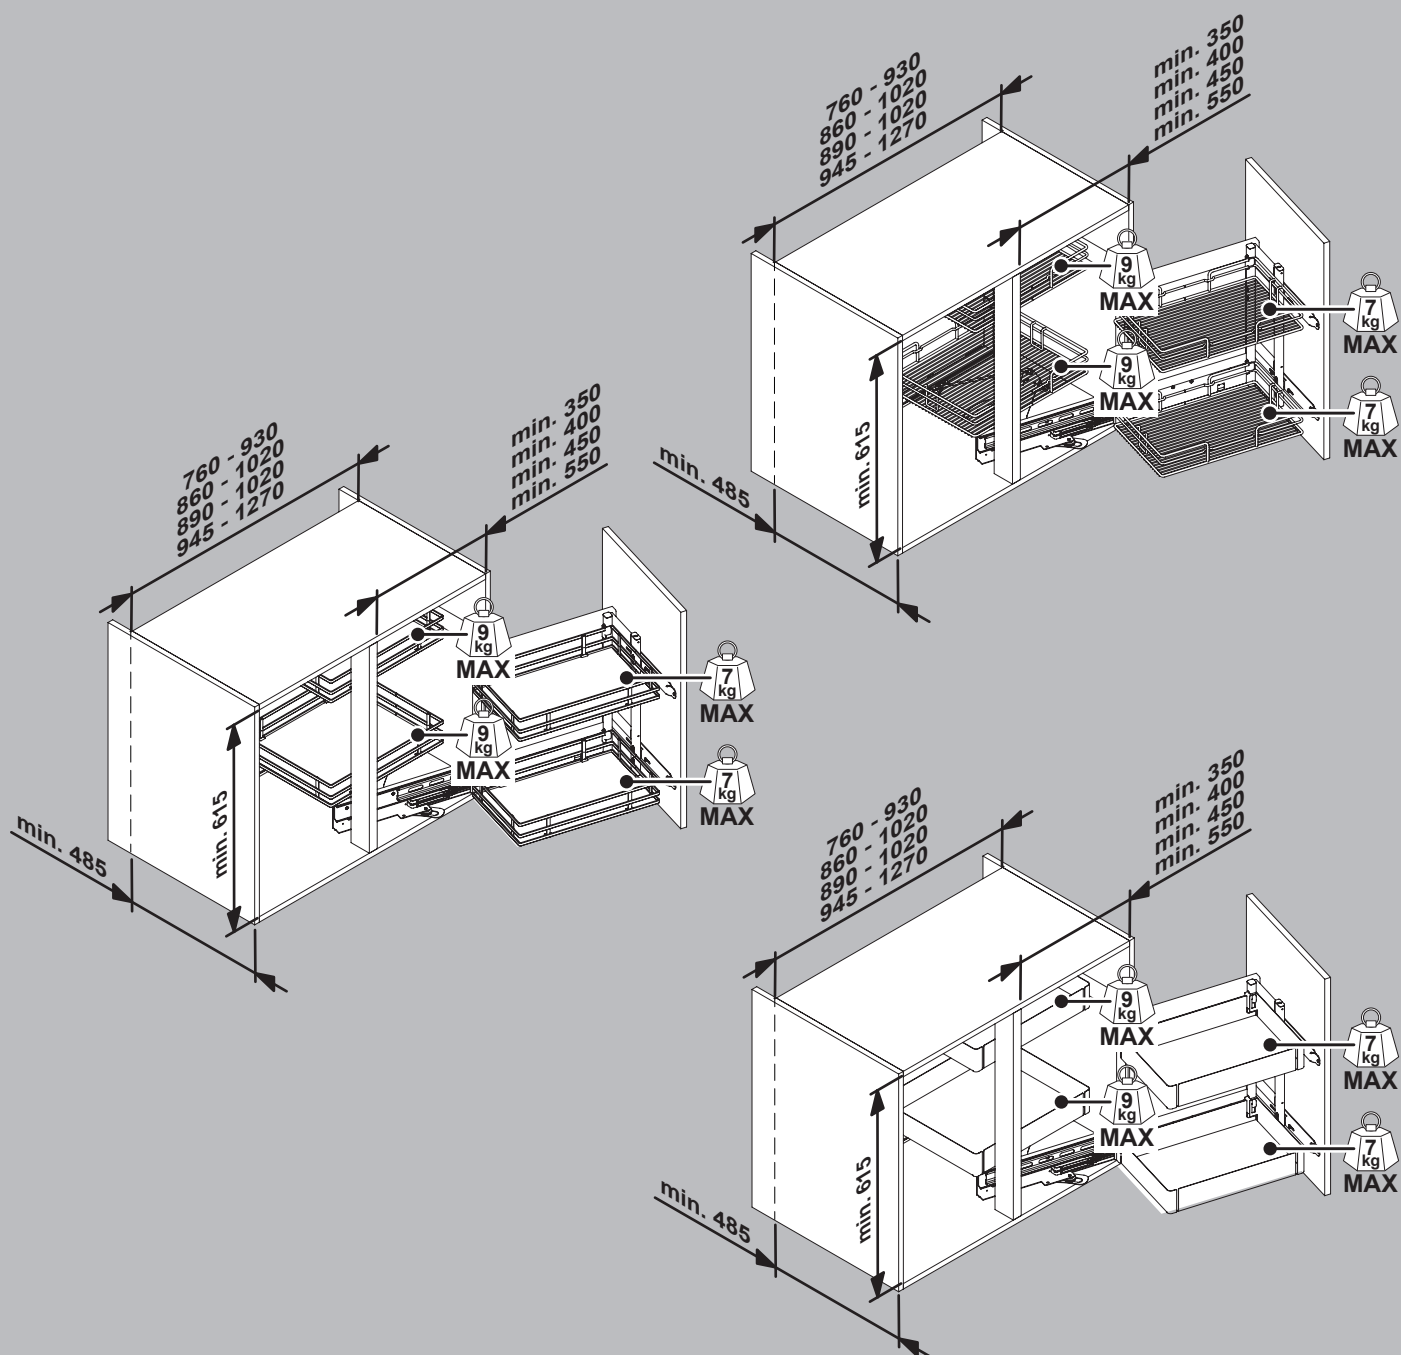
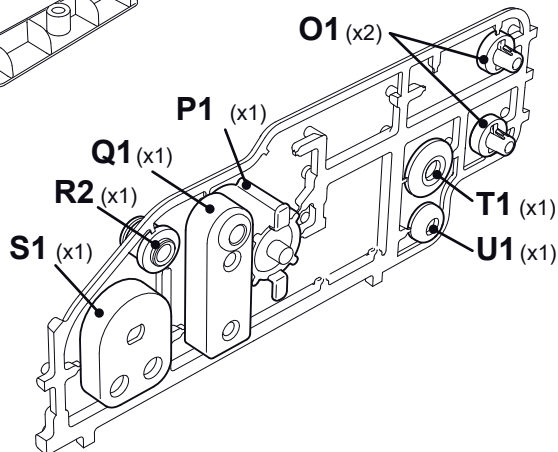





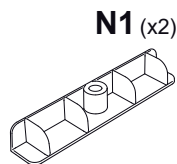
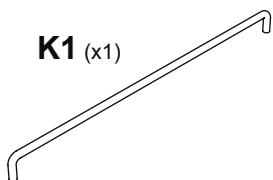
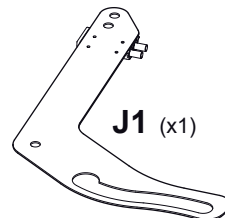
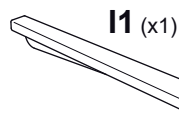
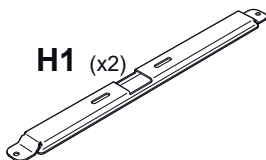
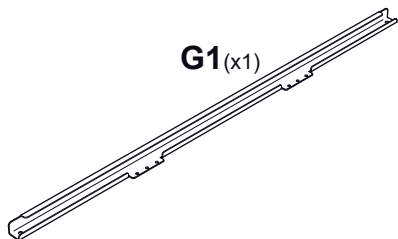
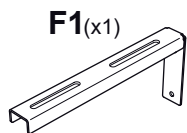
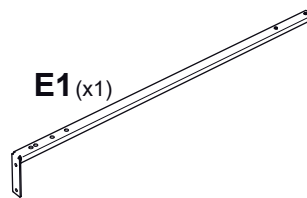
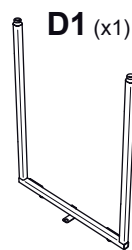
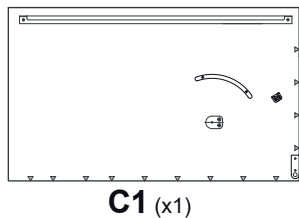


A3OISTR1298_R02 05/2025

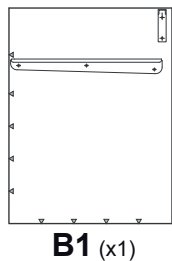

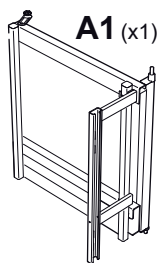

V1 (x13)

W1 (x2)

X1 (x1)


Y1 (x2)

Z1 (x1)


A2 (x2)

B2 (x2)


C2 (x2)

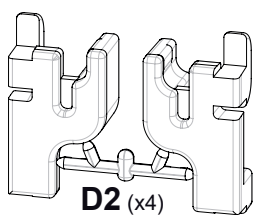


D2 (x4)

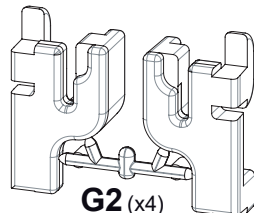


G2 (x4)

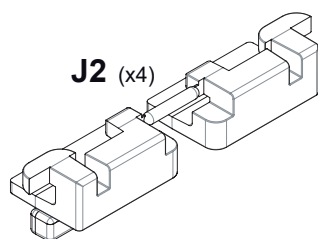


J2 (x4)

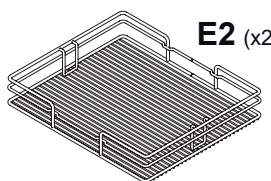


E2 (x2)

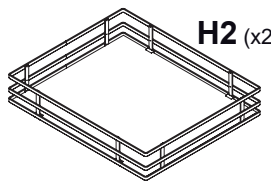


H2 (x2)

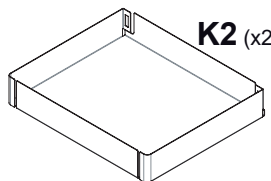


K2 (x2)

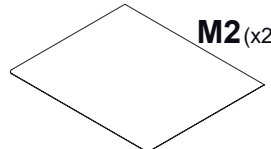


M2 (x2)

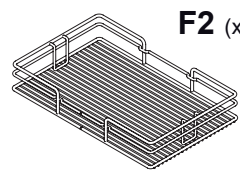


F2 (x2)

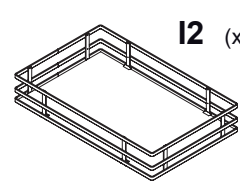






I2 (x2)

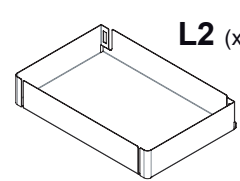


L2 (x2)

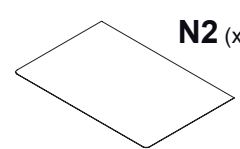


N2 (x2)

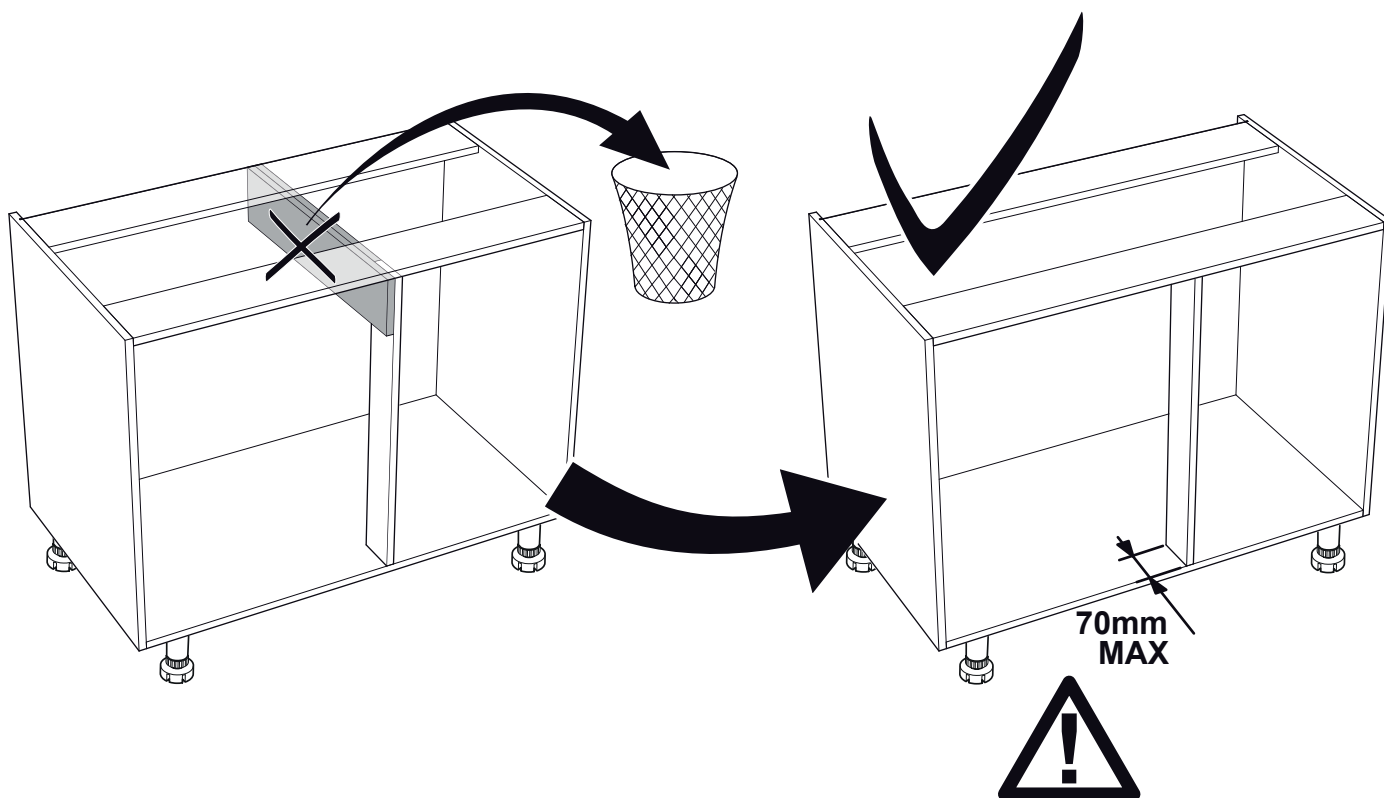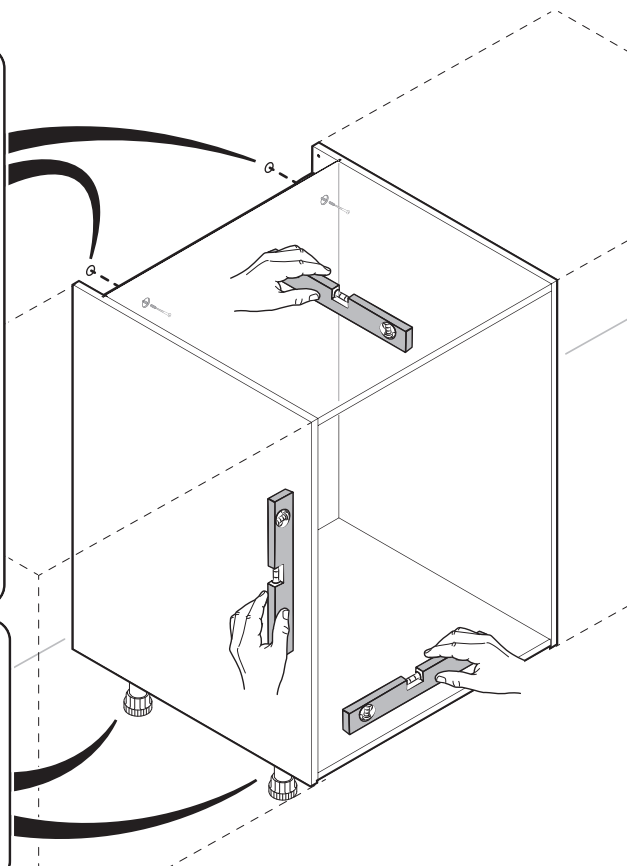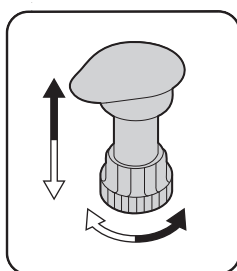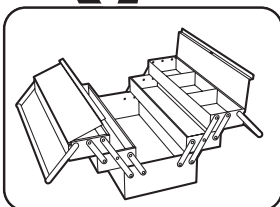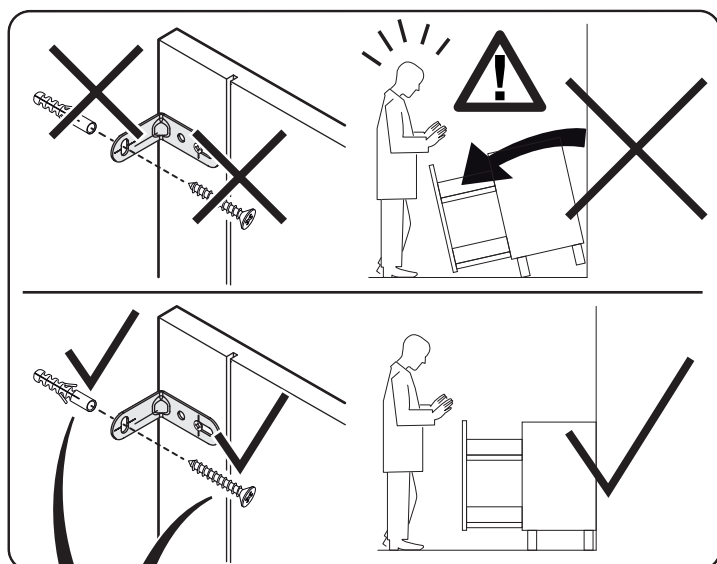


1

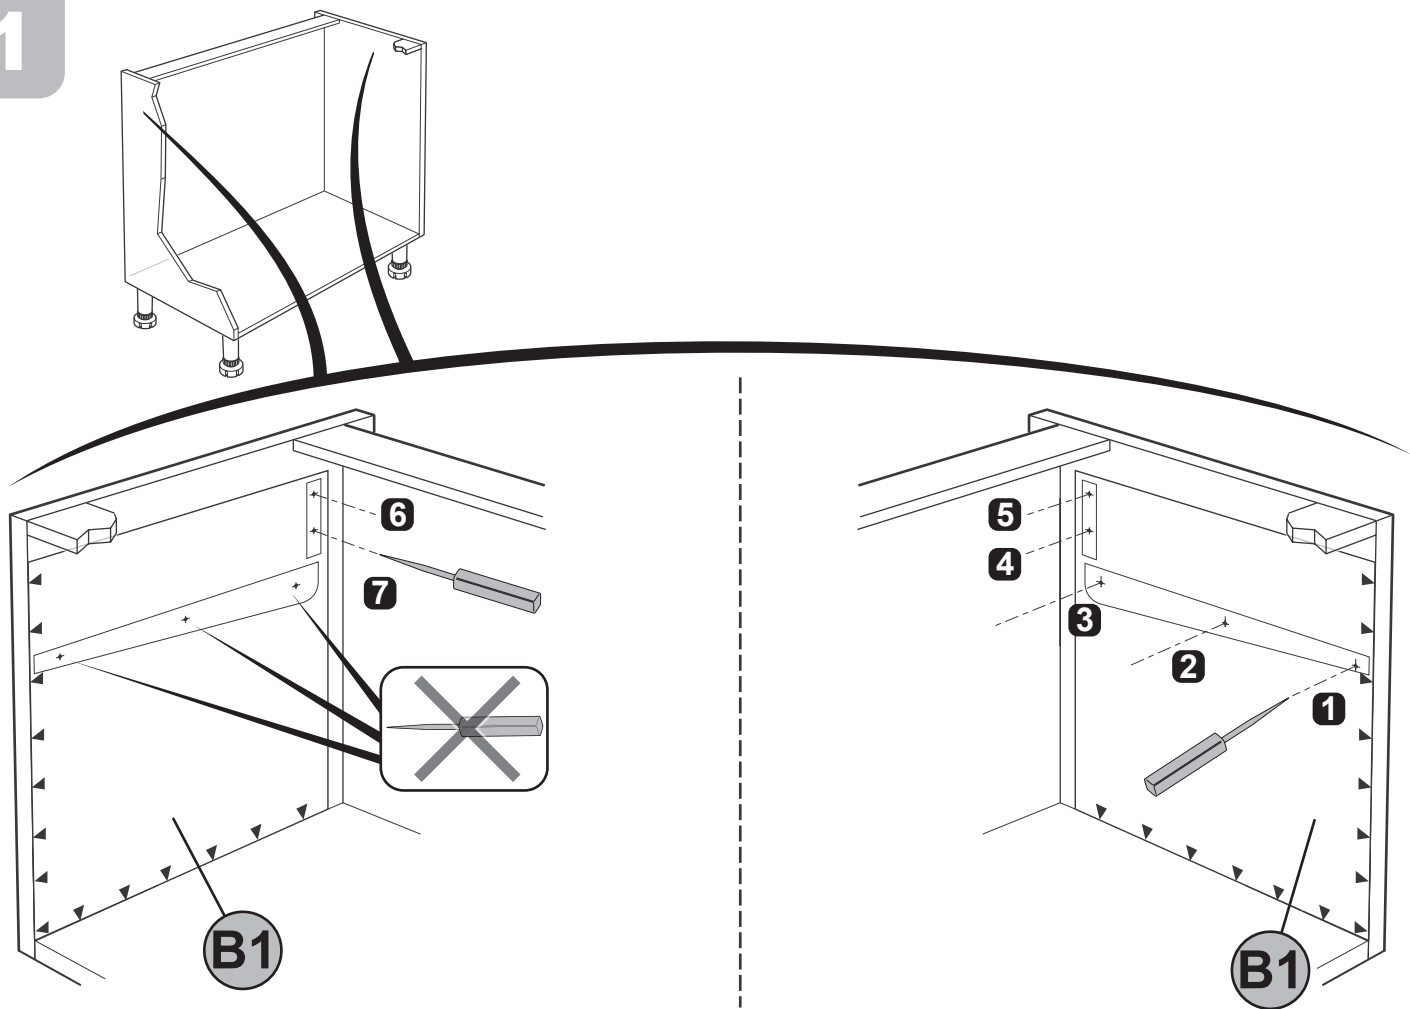


2

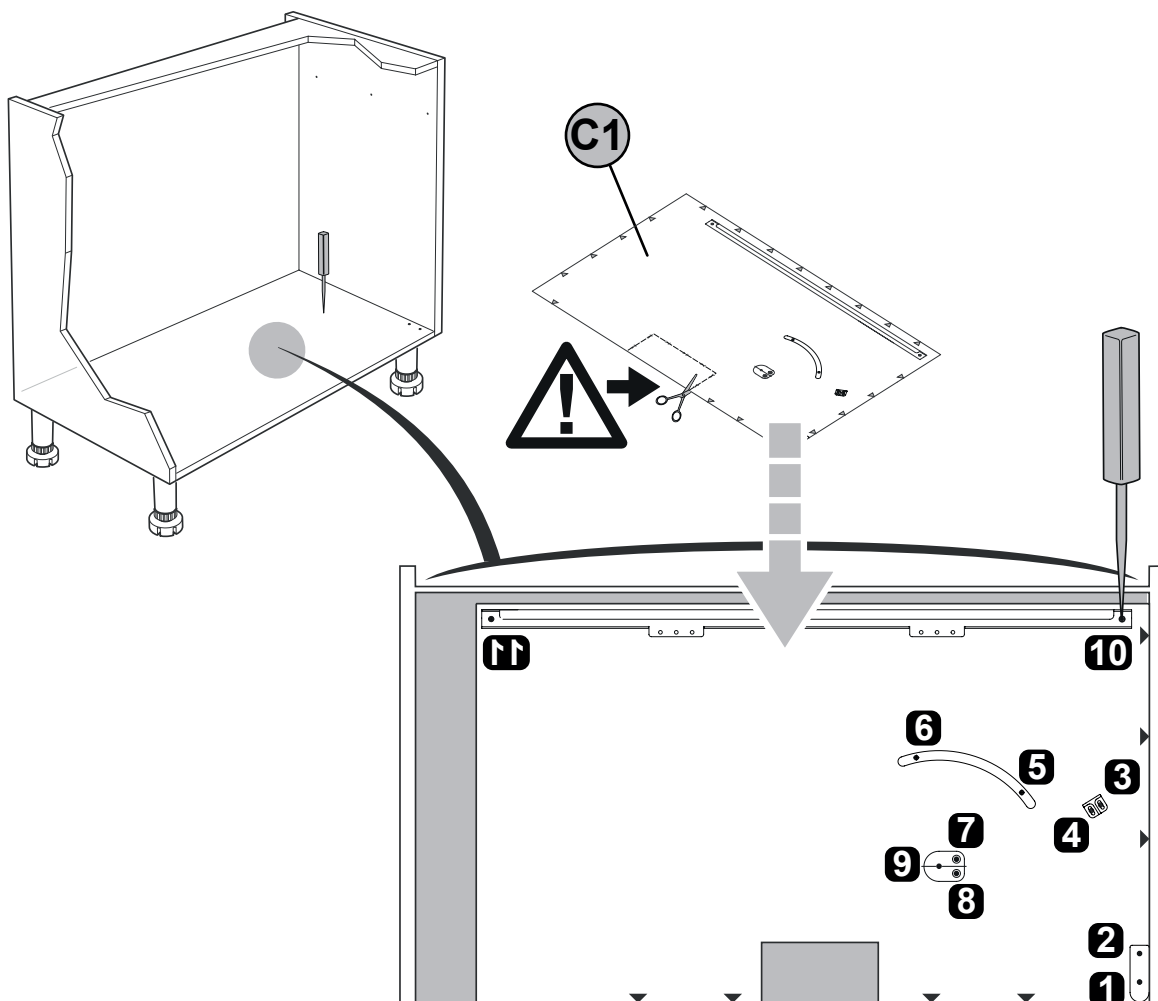

3



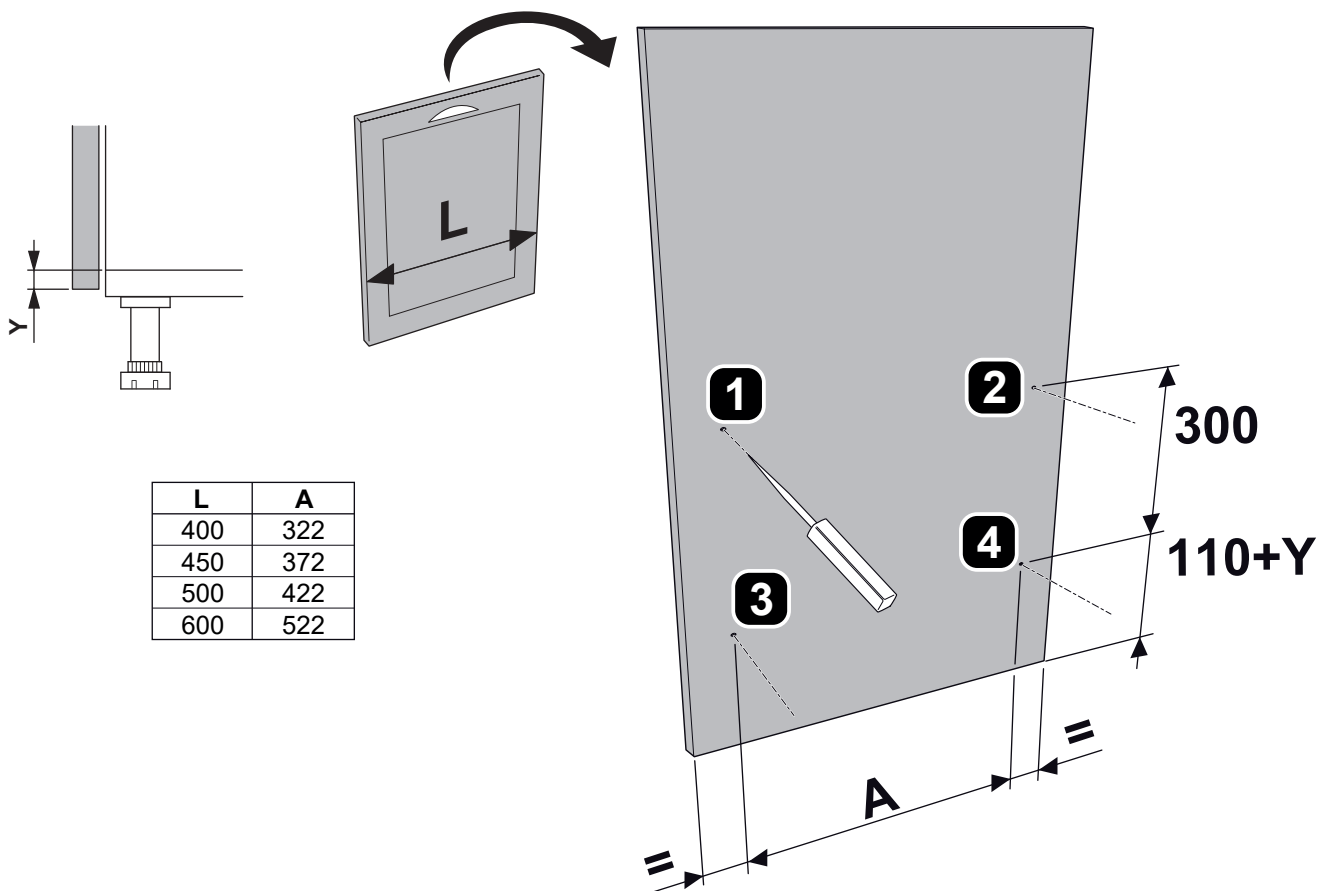


4

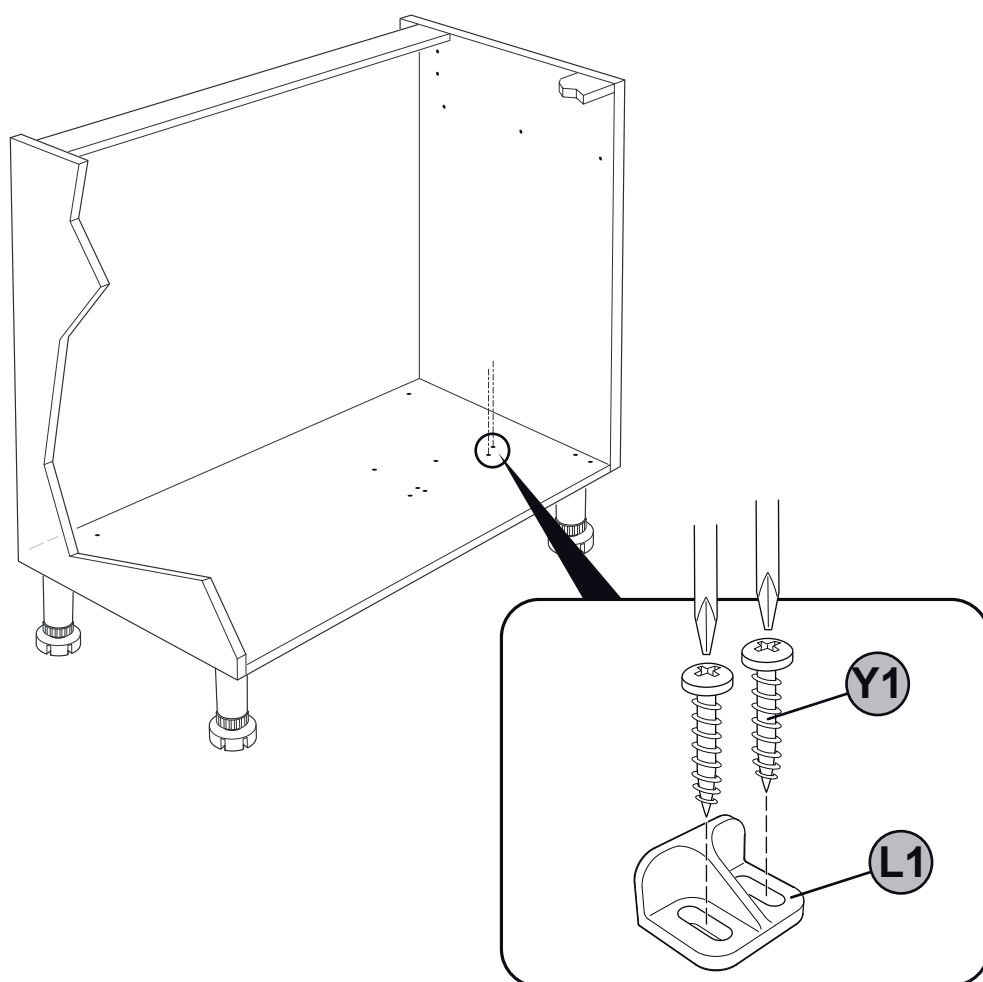


5

5

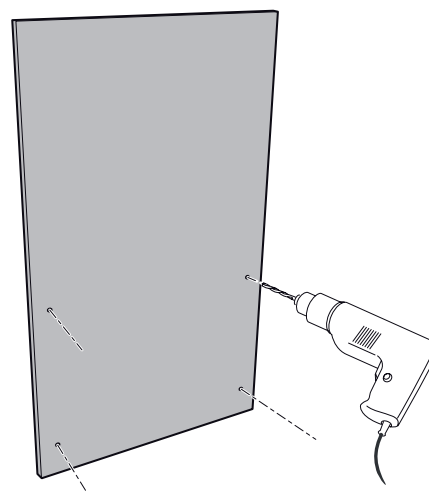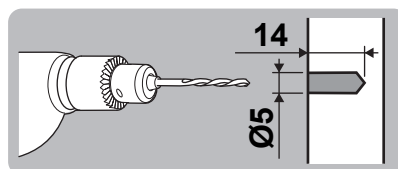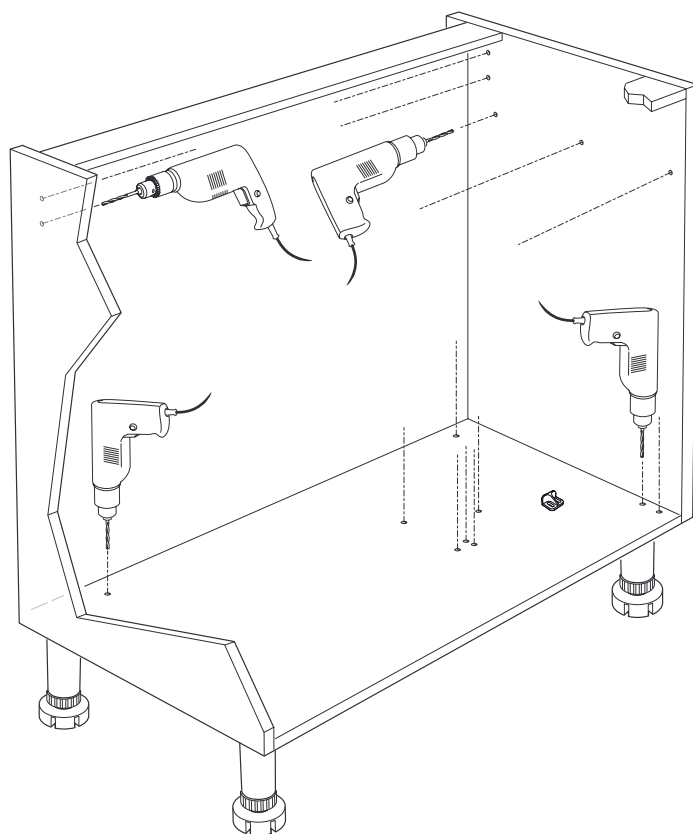

6

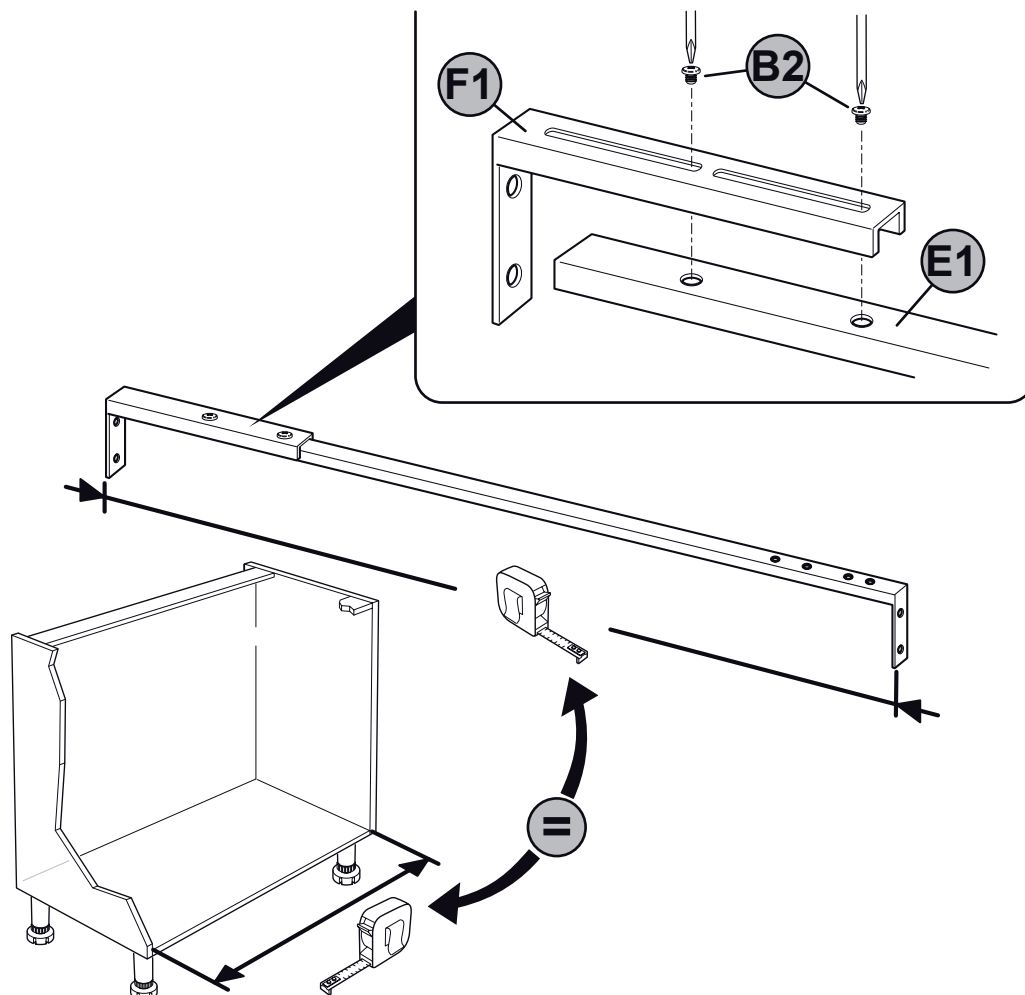

7

The diagram illustrates the final step of assembling a cabinet. The main view shows a cabinet frame with four legs. A shelf is being inserted into the frame. A label **G1** points to the shelf's support rail. Three circular callouts show close-ups of the shelf being secured with screws labeled **V1**. The callouts show the screws being inserted into the shelf's support rail and the cabinet's side panel.


8

This diagram illustrates the eighth step of the assembly process. It is divided into two main sections by a vertical dashed line.


Left Section: Shows a perspective view of the assembled frame. A rear panel is being attached to the back of the structure. A circular callout labeled **D1** points to a vertical support bracket that is being swung into place. Arrows indicate the movement of the panel and the bracket.

Right Section: Shows a top-down view of the rear panel. Two circular callouts highlight the attachment points for the support brackets. The bottom callout is further magnified, showing a screw labeled **A2** being inserted into a pre-drilled hole in the panel, which is secured by a bracket labeled **N1**.


9

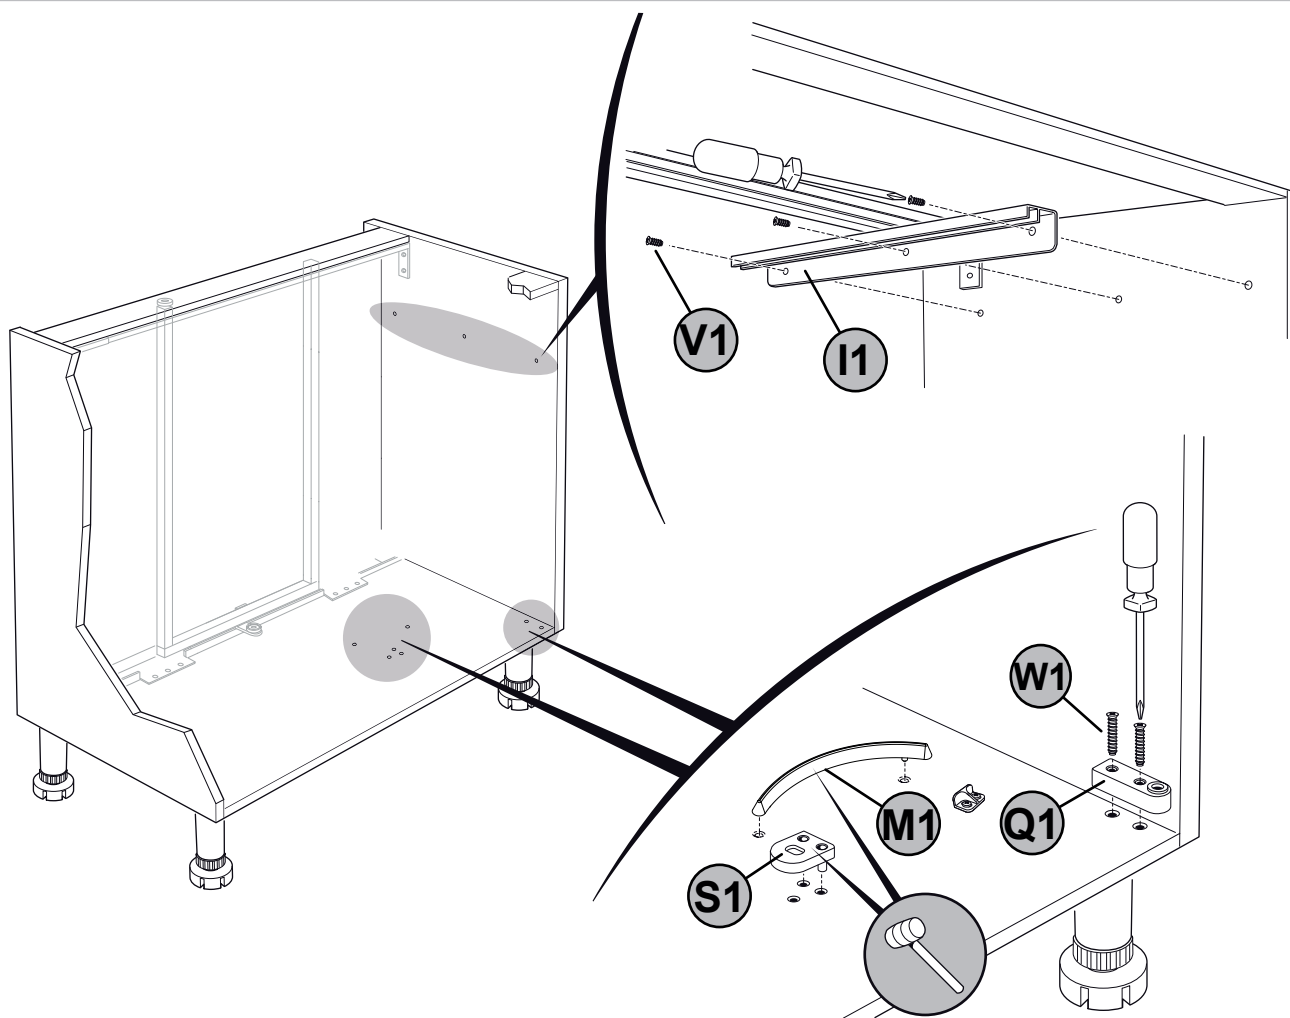


10

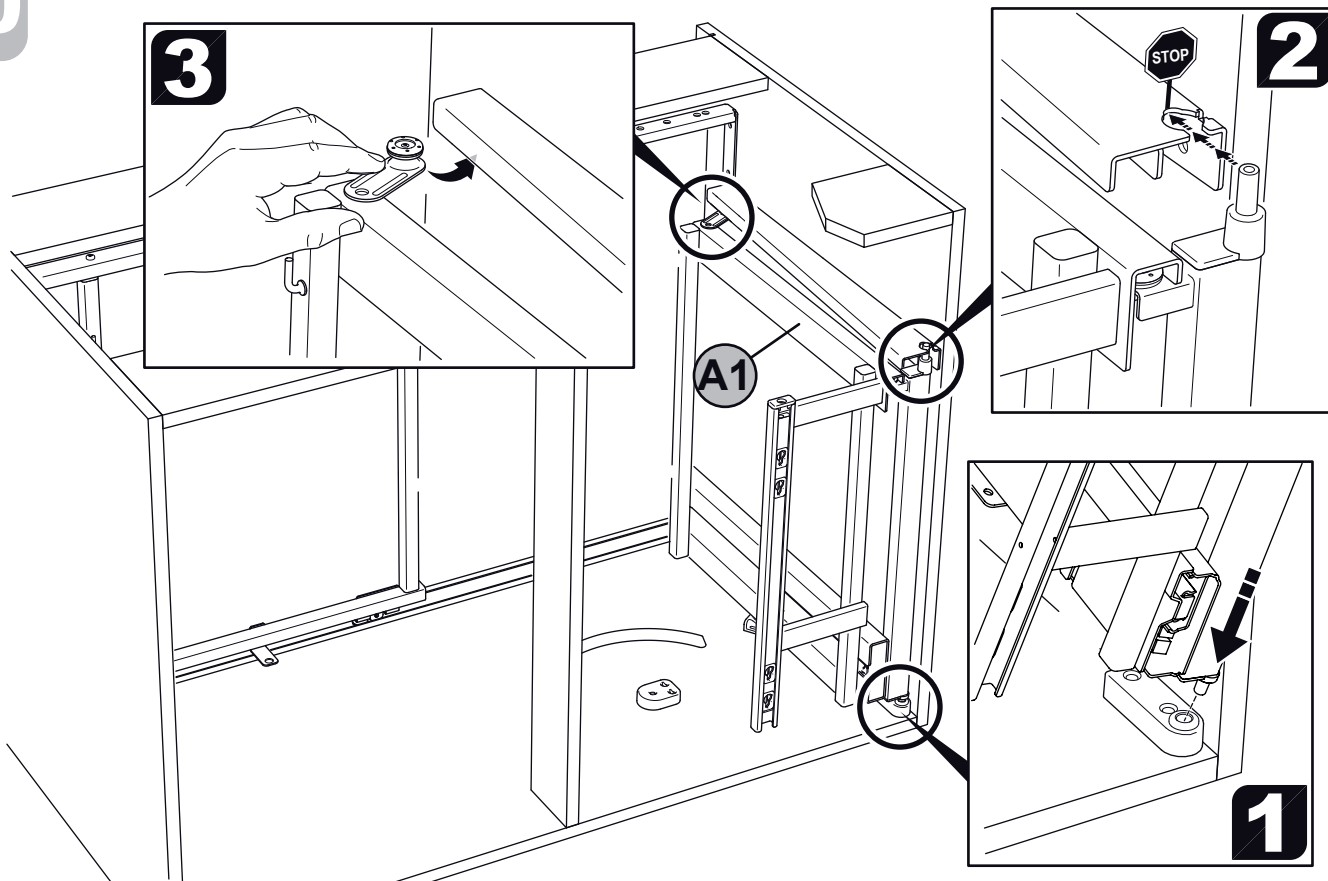


11

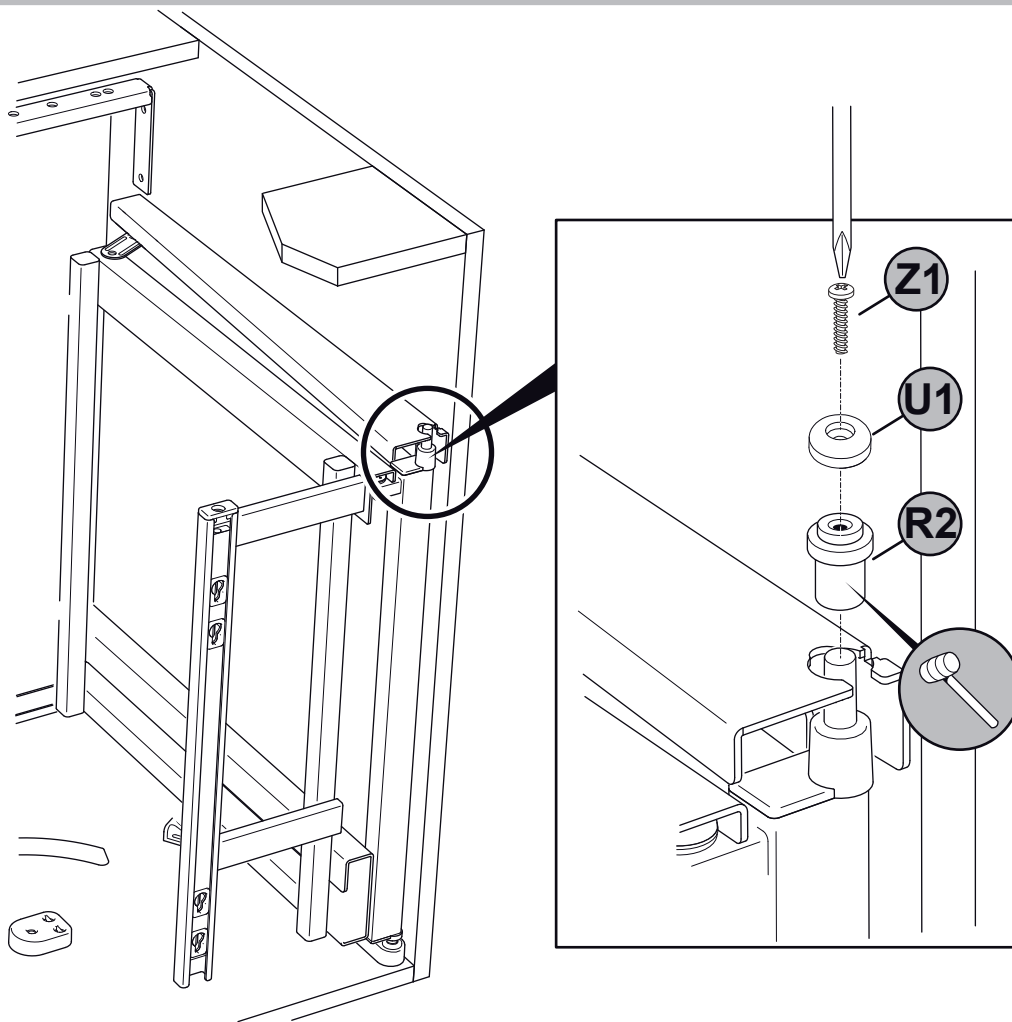

12


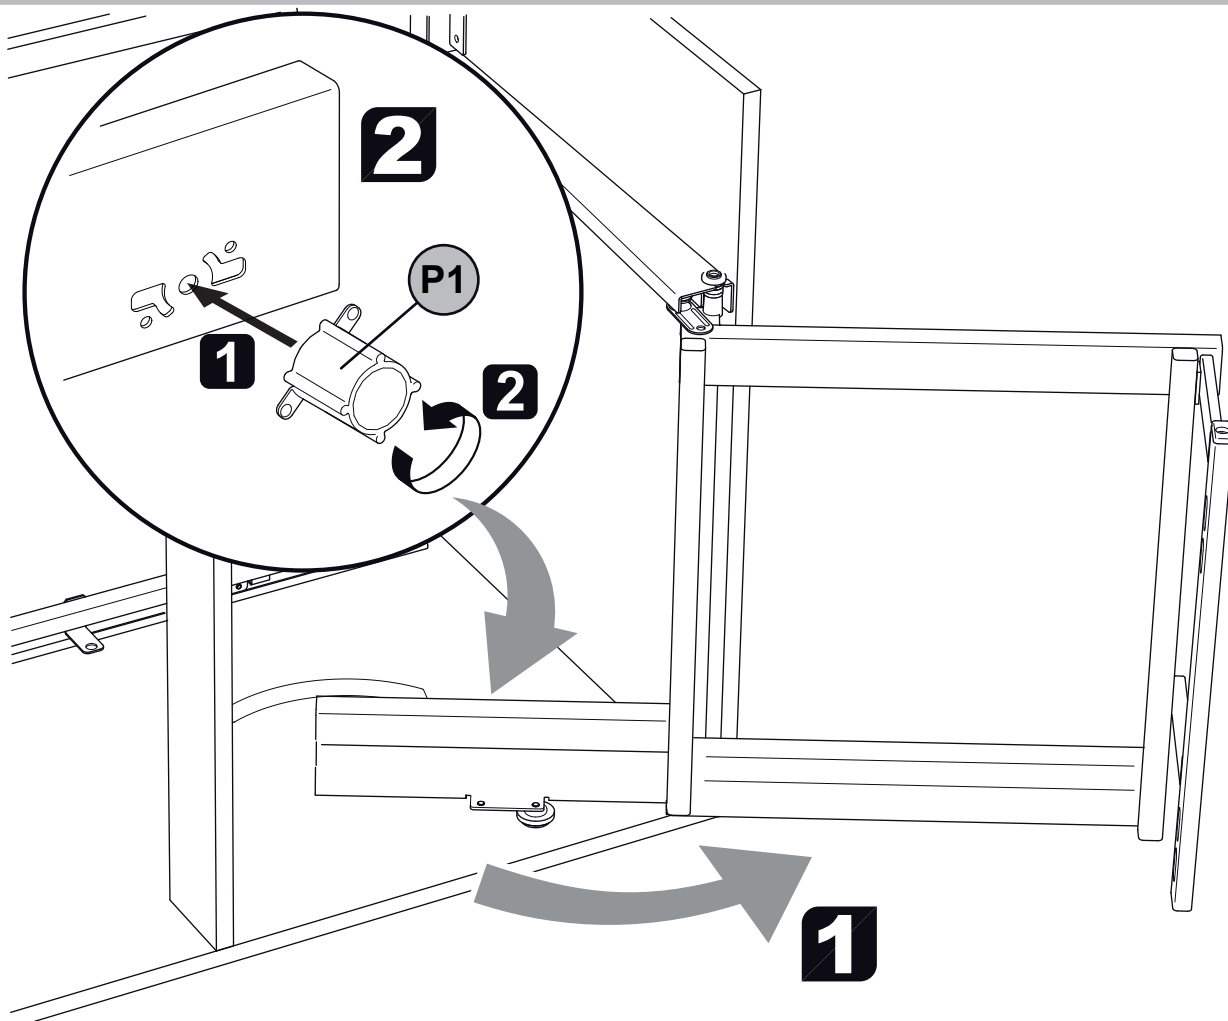


13

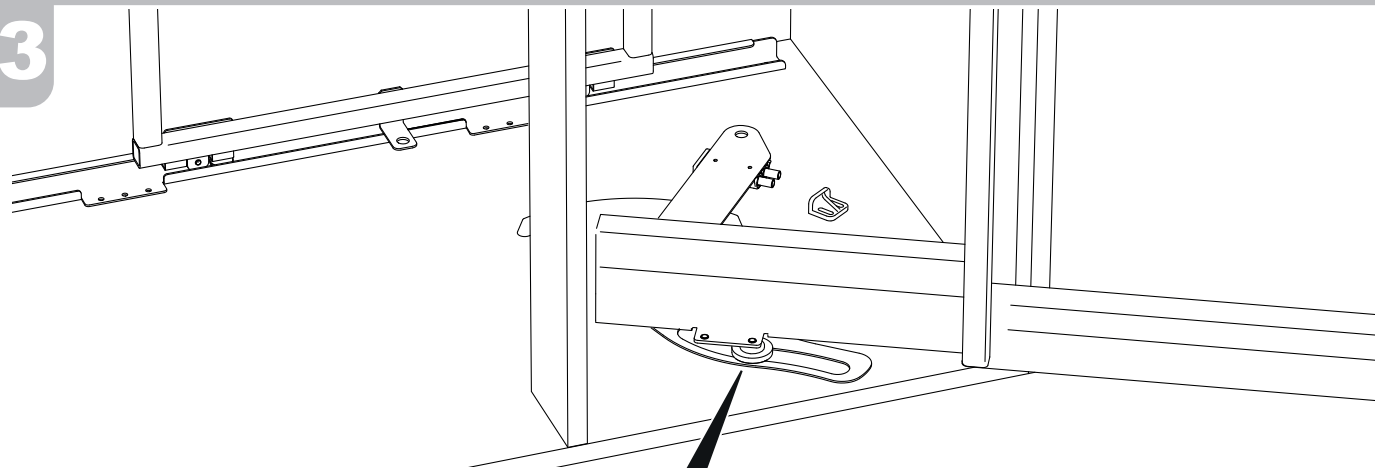


1



2

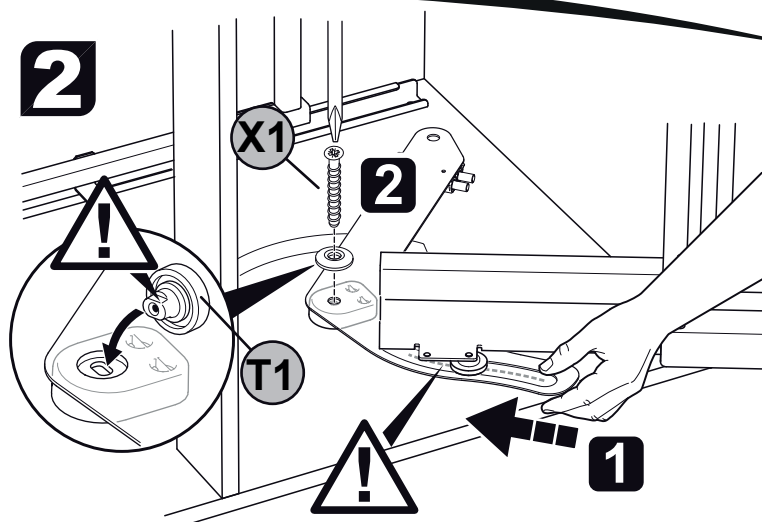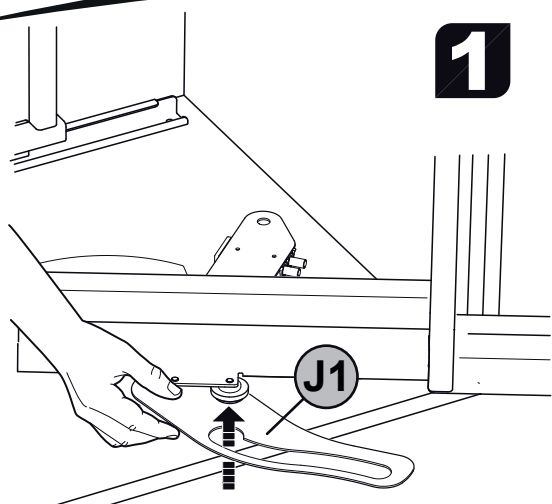



14

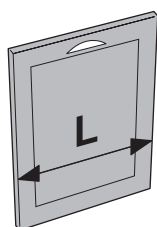


L = 400

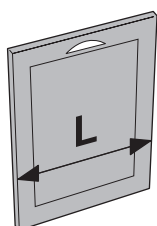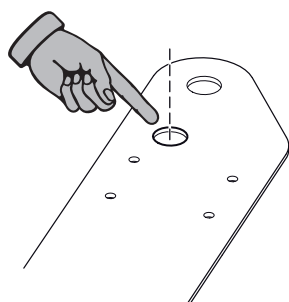


L = 450
L = 500
L = 600

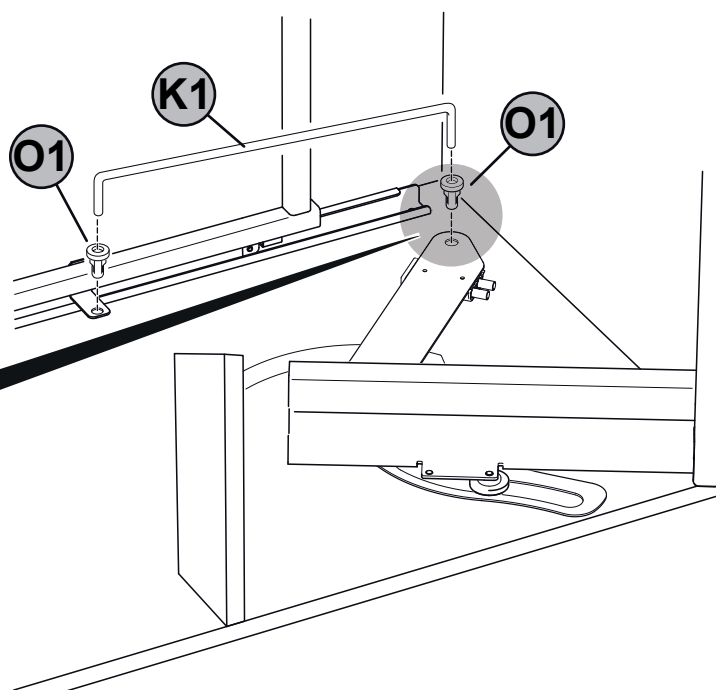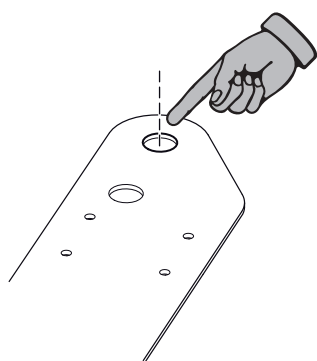


15

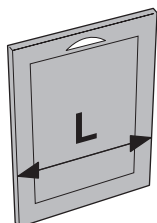


L = 400

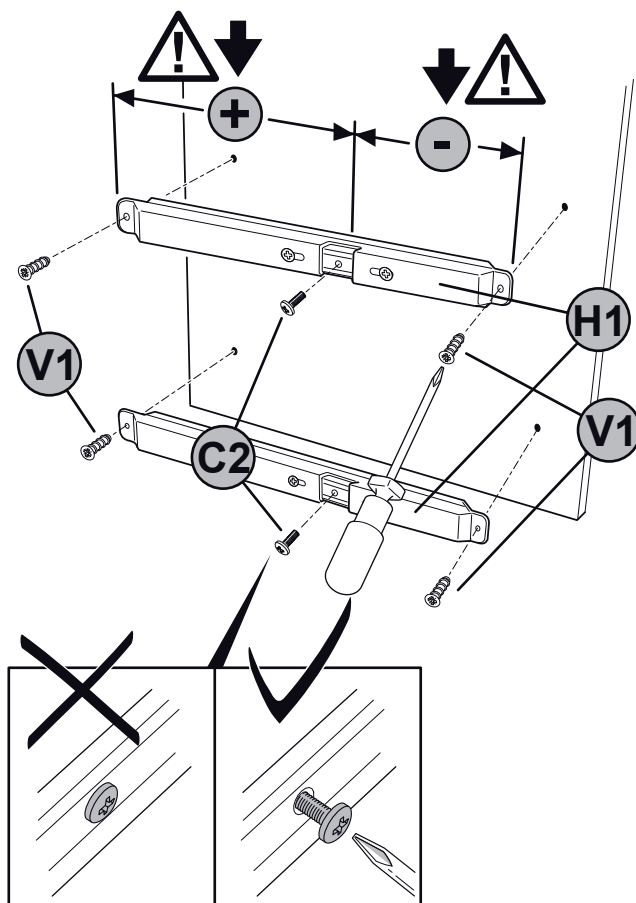


15

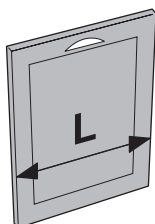


L = 450

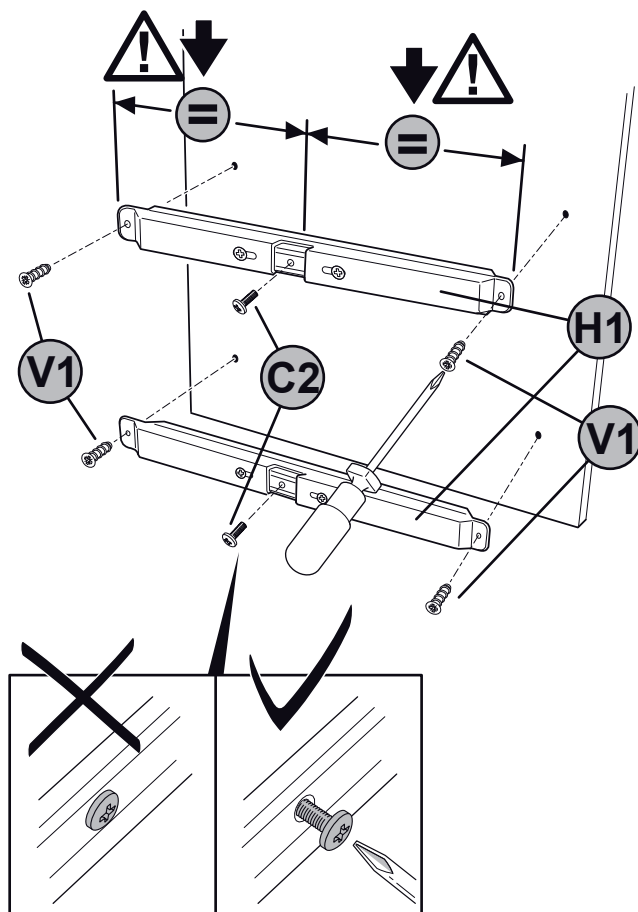


15

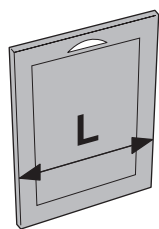














L = 500
L = 600

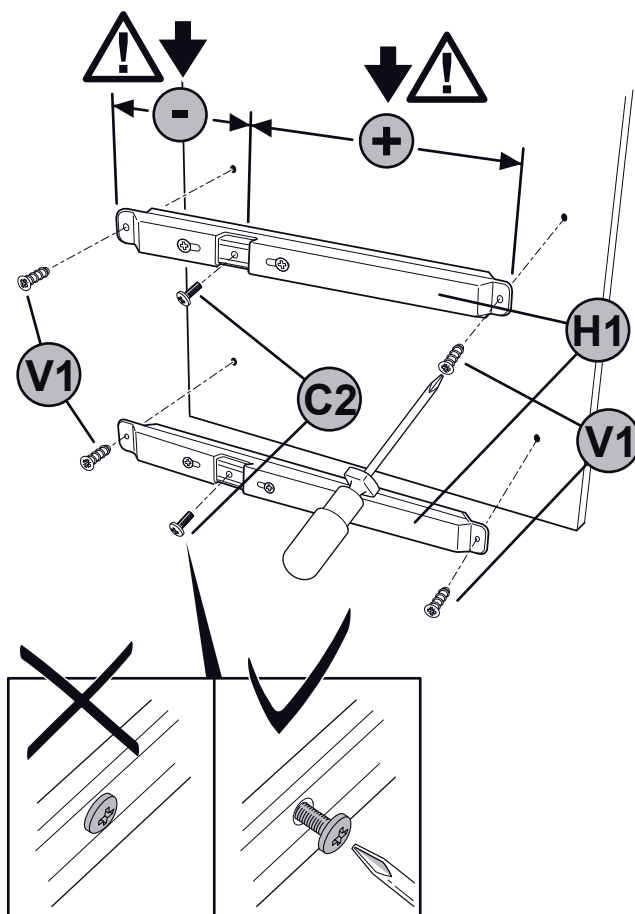






16

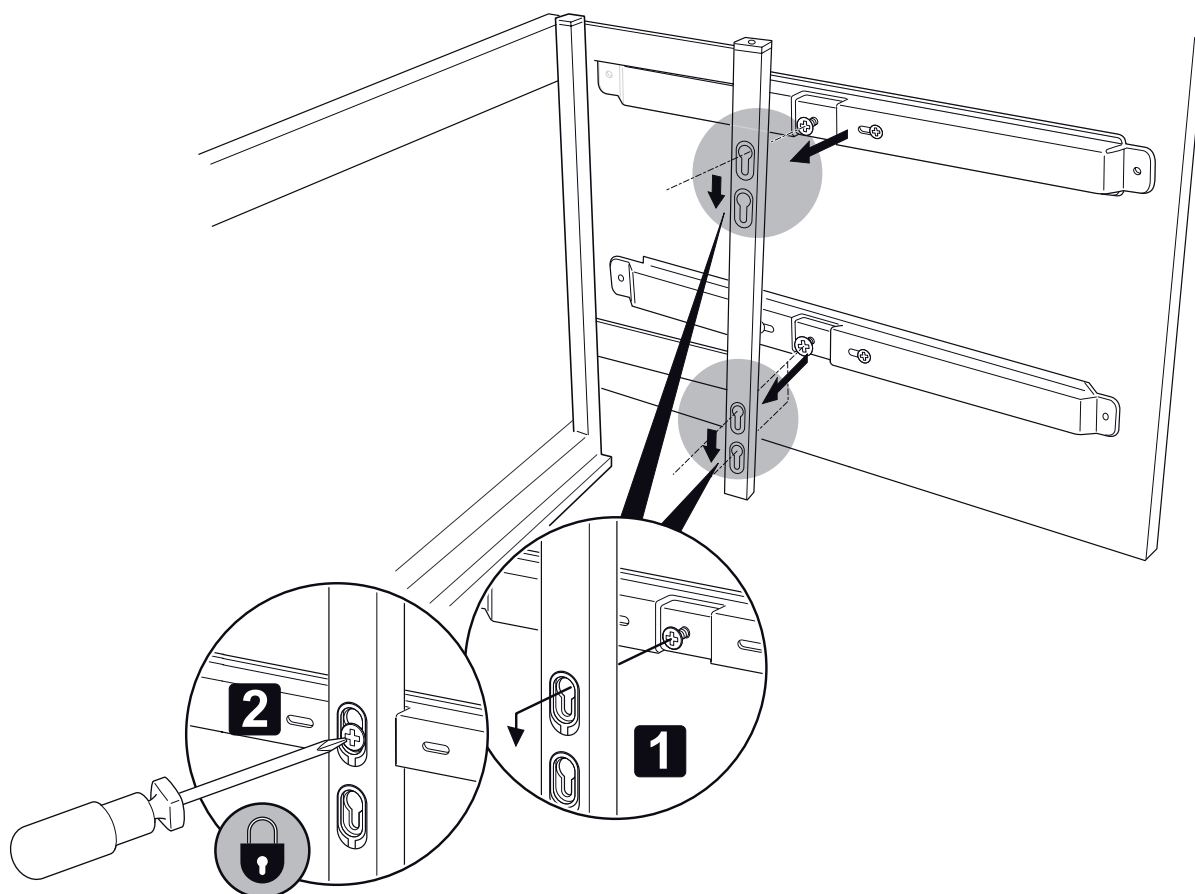



17

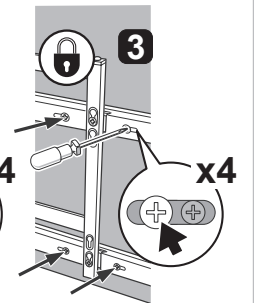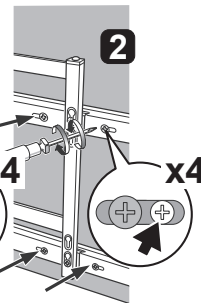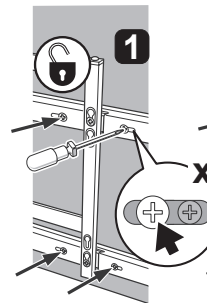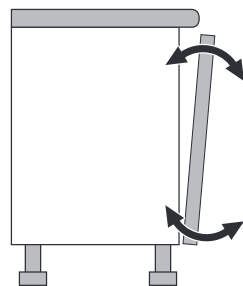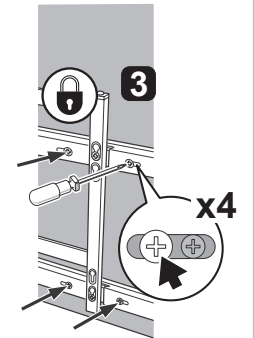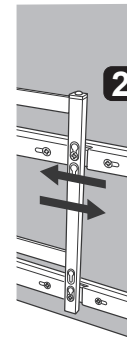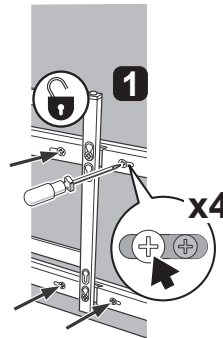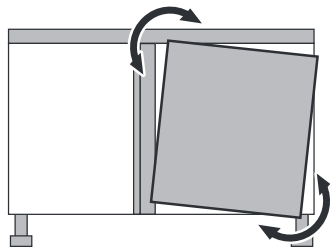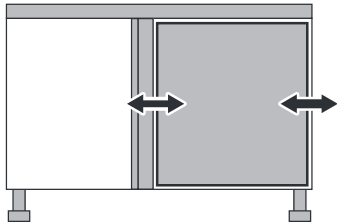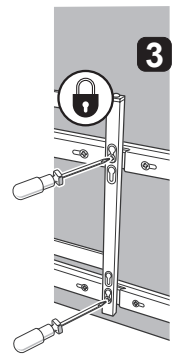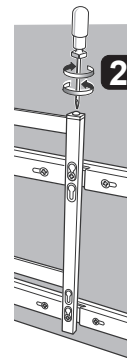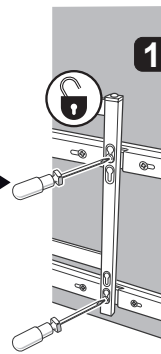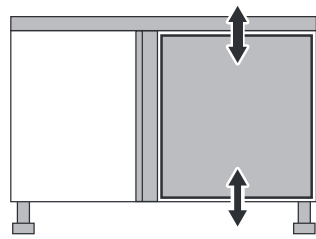



18

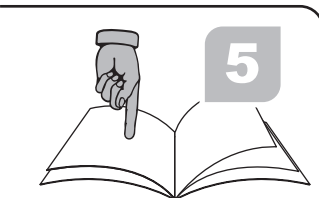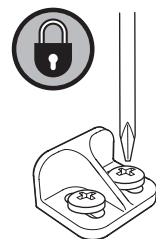
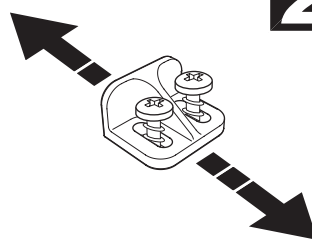
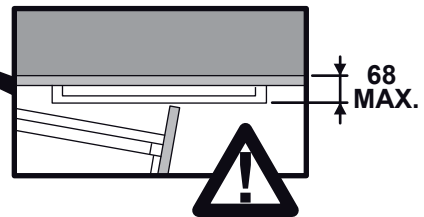
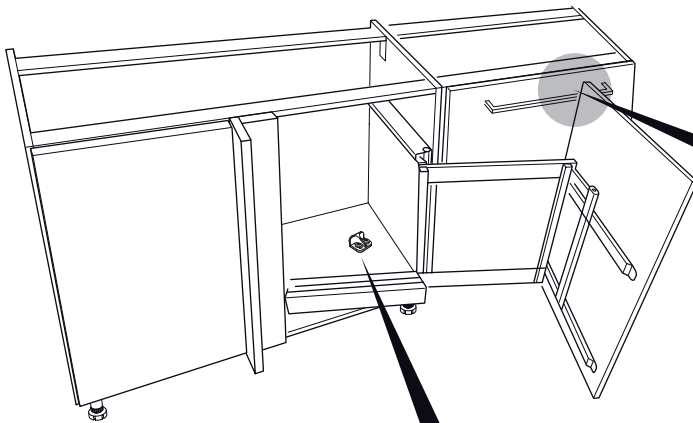


19

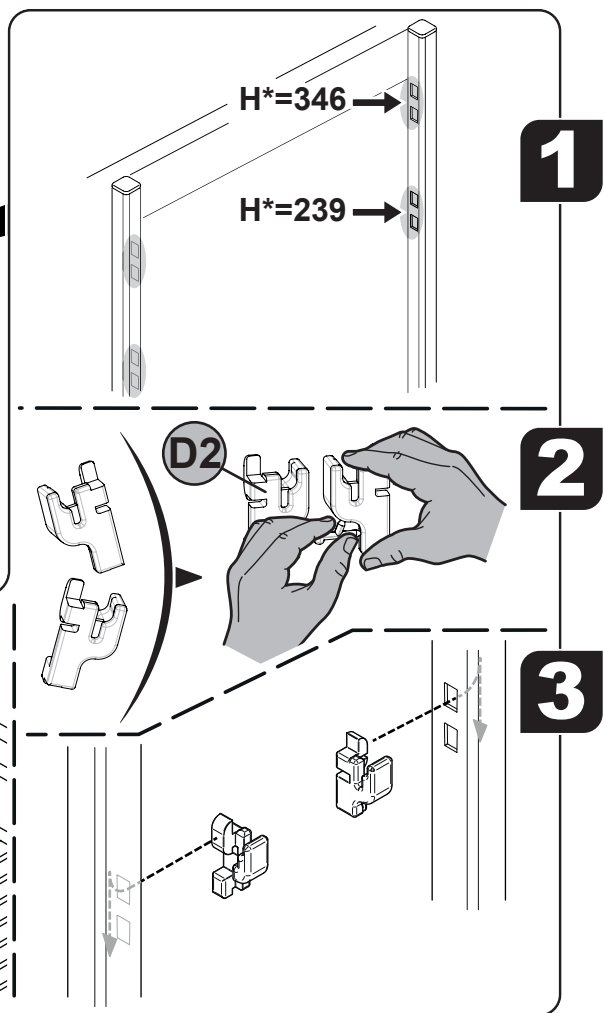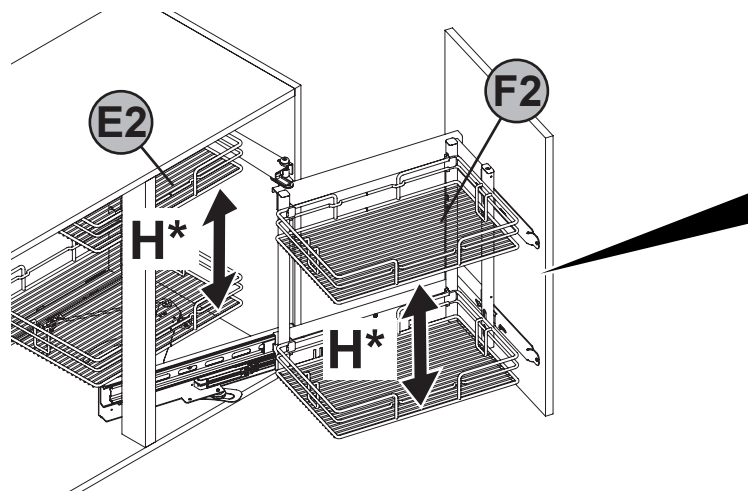

19

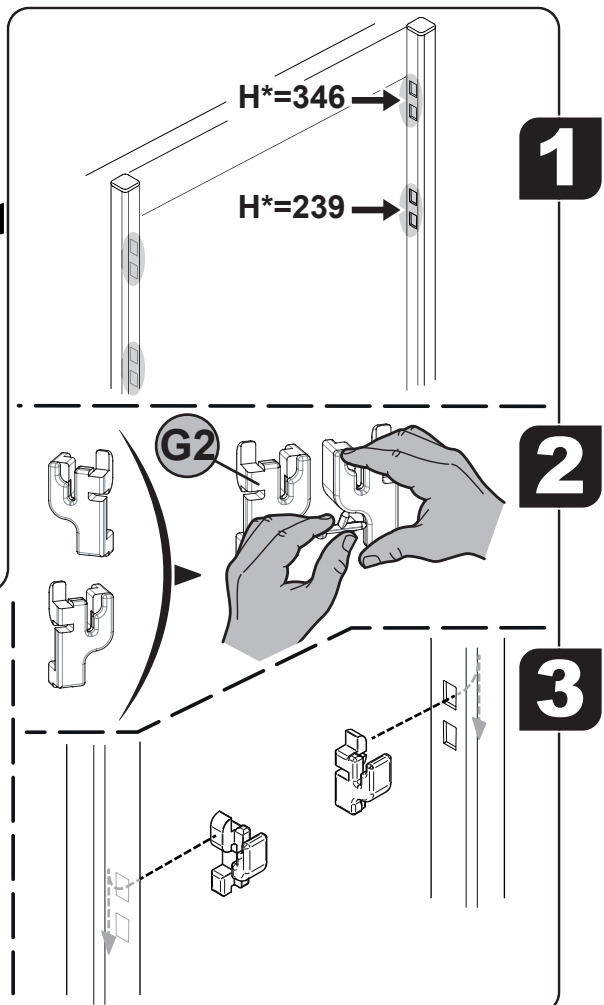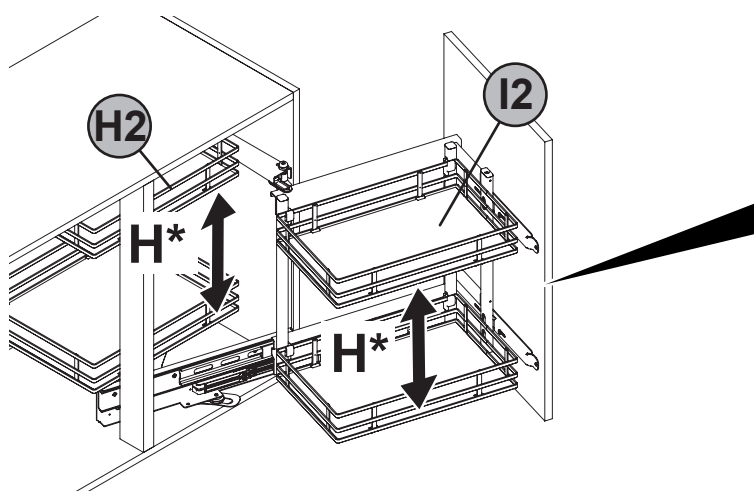

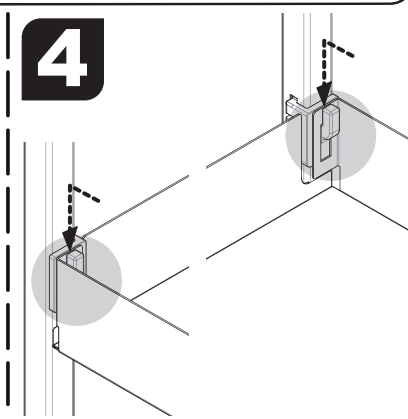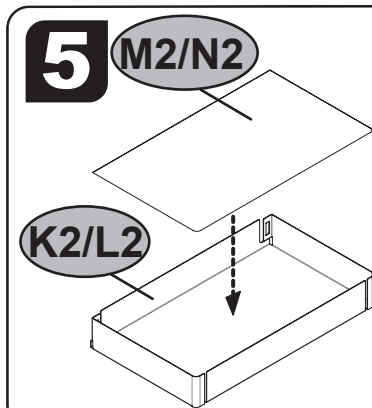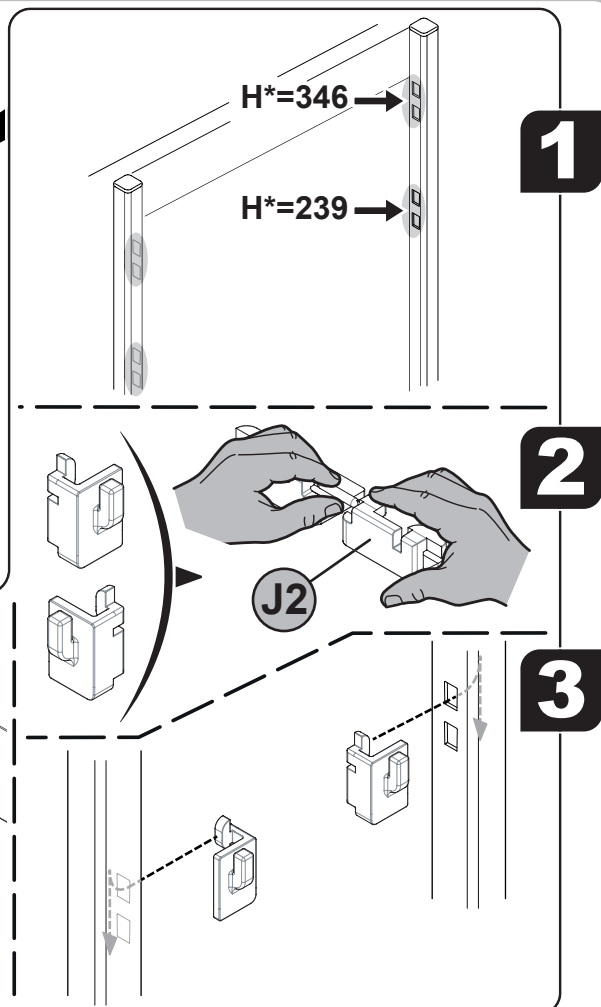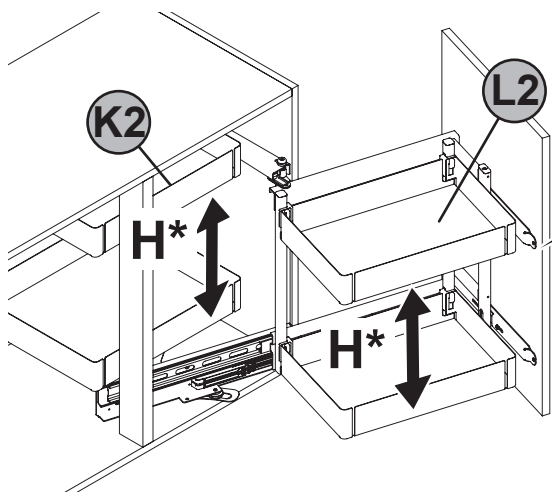This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]